


Assembly guide WS-4 (8468-XXXXX)

Wall bracket for smaller speaker systems
allowing an inclination of up to 90° and a rotation of up to +/- 15°

Tools and additional material needed:


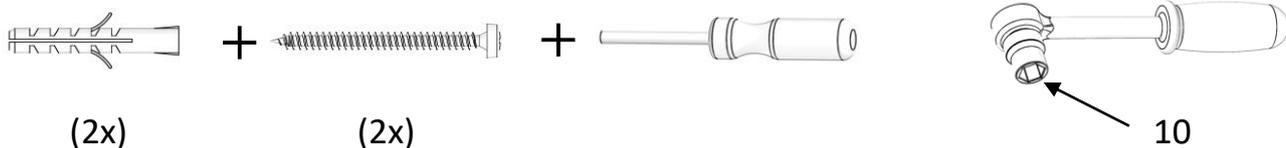


There are several possible mounting positions for WS-4.



Configuration A

Configuration B



Ceiling,
horizontal
alignment

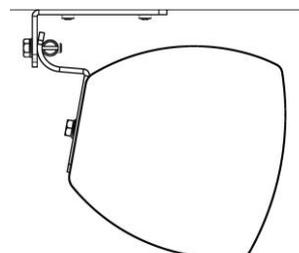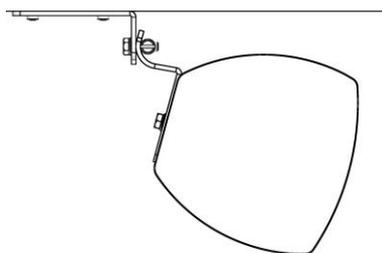


Ceiling,
vertical
alignment

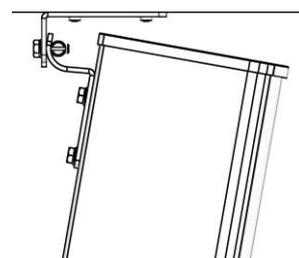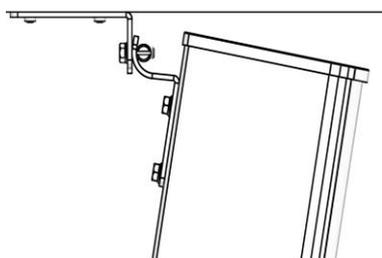


Wall,
horizontal
alignment

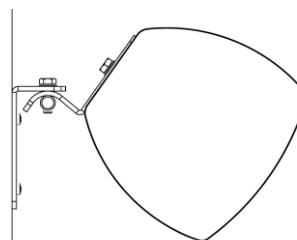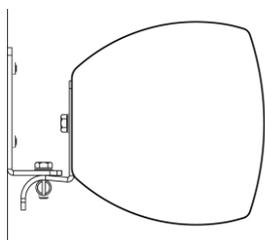

Wall,
vertical
alignment

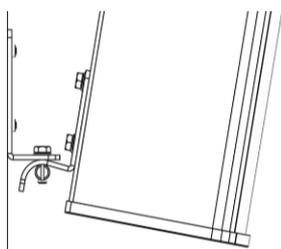


1. Wall plate placement

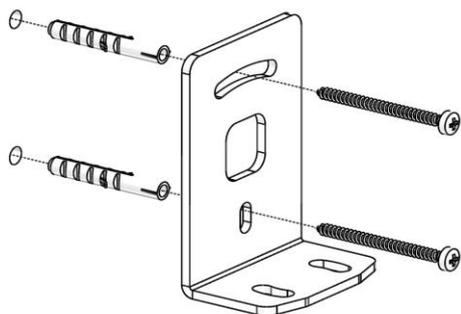


Mount the wall plate to the wall using suitable screws and dowels. (Screw diameter max. 5 mm)

2. Configuration A

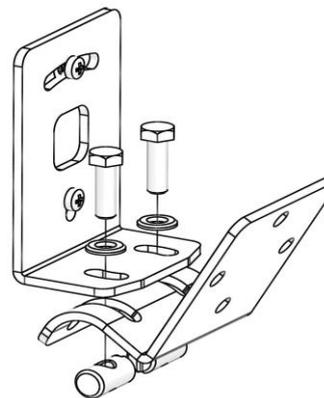


For mounting positions in the left-hand column of page 1, assemble the parts as shown above. Do not tighten the screws completely yet.

2. Configuration B

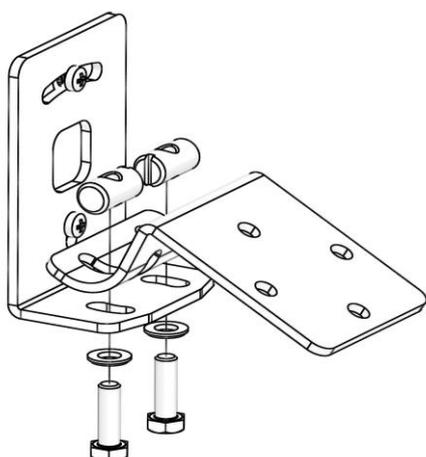


For mounting positions in the right-hand column of page 1, assemble the parts as shown above. Do not tighten the screws completely yet.

3. Vertical speaker position

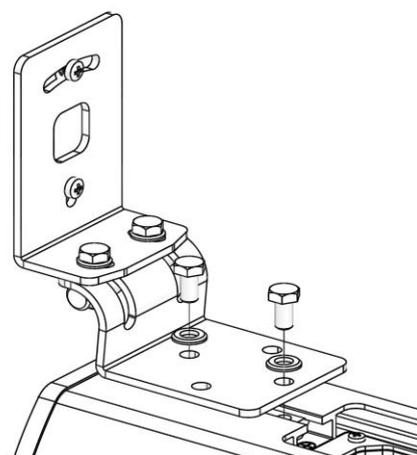


Position the housing plate anywhere along the T-slot of the cabinet. The slot nuts are supplied with the speaker.

3. Horizontal speaker position

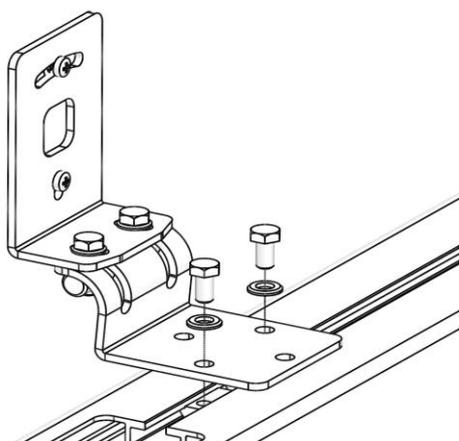

Position the housing plate at the centre of gravity of the cabinet. For speakers longer than 1.3 m we recommend using two WS-4 at a distance.

4. Final adjustment

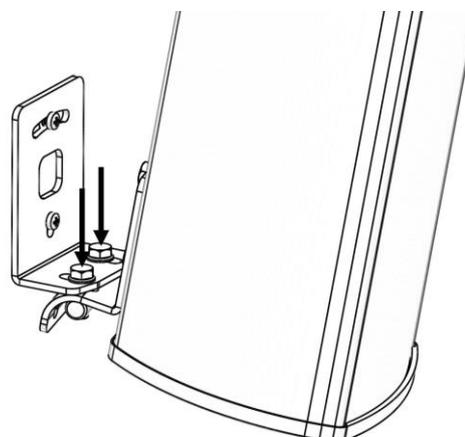

Adjust the speaker to the desired position by tilting and panning before tightening the screws highlighted above.